Lytecel 6-page Inst. Sht.qxd 2/25/05 4:40 PM Page 1

Outlet Box, Canopy, Slide Grip Hanger

7 Assemble Slide Grip Hanger to Fixture as in Step 2. Bring service leads from Outlet Box through AC1 and Slide Grip Hanger, securing AC1 and Slide Grip Hanger to Outlet Box.

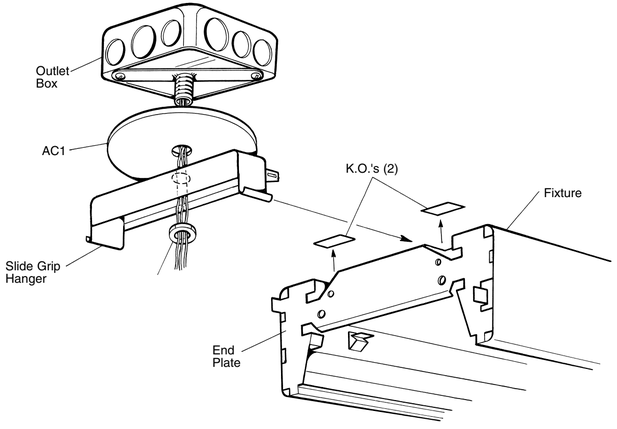

8 **Surface Mount Direct to Surface Without Slide Grip Hanger**

Insert Flexible Connector with at least 1/2" long leads into wiring compartment and secure the Flexible Connector with the Flexible Connector Locknut. Mount the Fixture to the ceiling with Mounting Screws (by others) or toggle bolts (not supplied) through four 7/32" x 9/32" rectangular holes. Make sure Fixture is mounted firmly and the ceiling can withstand the weight of the Fixture.

Make electrical connections to Fixture, using twist-on wirenuts provided. Re-install Wireway Cover, install lamps (by others). Slip Ball Chain into key slots in Wireway Cover and Install Louver.

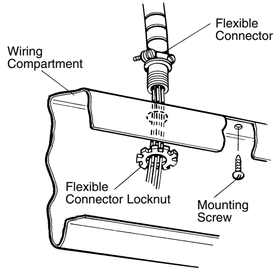

Lightolier

45 INDUSTRIAL WAY, WILMINGTON, MA 01887

LYTECEL LINEAR SURFACE/PENDANT AND ELECTRICAL FEED INSTRUCTIONS

NOTE: Fixture should be installed by a qualified electrician. Before installation, see dimensions.

1 **Dimensions**

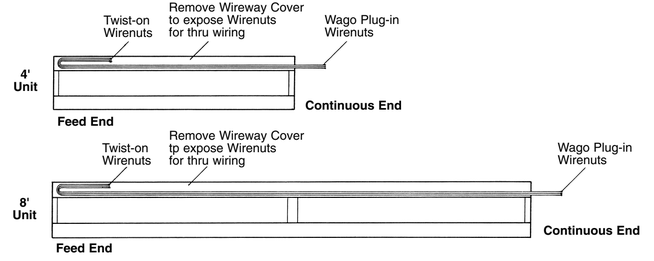

2 **Slide Grip Hanger Assembly End Or Middle of Row**

Remove Louver by releasing four Spring-loaded Latches. Remove Wireway Cover. Remove K.O.s (2) from top of End Plate and install Slide Grip Hanger into K.O. openings. Secure Slide Grip Hanger to Fixture with Screw Provided. Feed wires through opening in End Plate, into Wireway and make wiring connections. If Fixture is to be used as an individual, or mounting is to be at joints, assemble Slide Grip Hanger to both ends of 1st Fixture.

Assemble End Cap to Fixture with Screws (2) Provided at end of row. Install Wireway Cover and Louver.

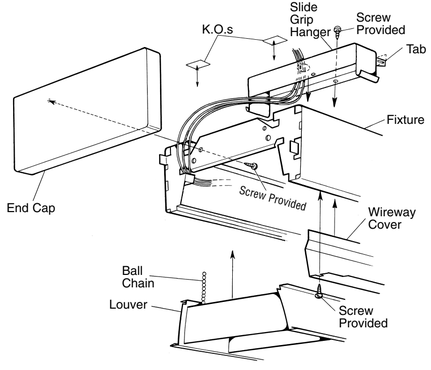

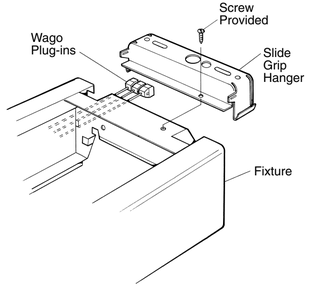

© a Genlyte company

59-31135-000

Printed in U.S.A.

Lytecel 6-page Inst. Sht.qxd 2/25/05 4:40 PM Page 2

Stem Set for End of Row or Continuous Row Mounting with Reflector or without Reflector.

3 Slip threaded end of stem through Canopy. Attach Stem(s) to Slide Grip Hanger using Nuts as shown. Assemble Slide Grip Hanger to Fixture Slide Rails. Assemble Ball Aligner to Stem and Slide onto Mounting Strap.

For sloped ceilings, be sure opening of Mounting Strap is positioned facing upward with the slope of the ceiling or Stem will disengage.

Bend Tab out to secure Slide Grip Hanger to Fixture when not installed at end of Fixture. Make wiring connections. Using Screws, secure End Cap to Fixture.

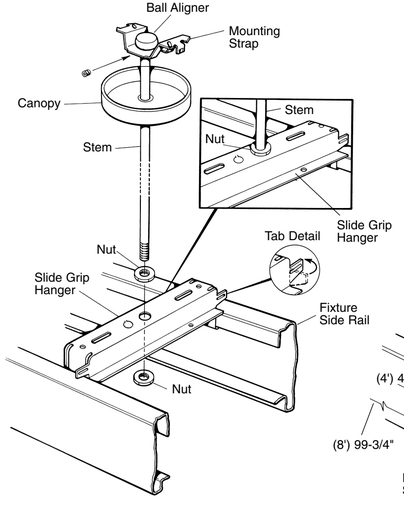

Slide Grip Hanger Along Length of Fixture

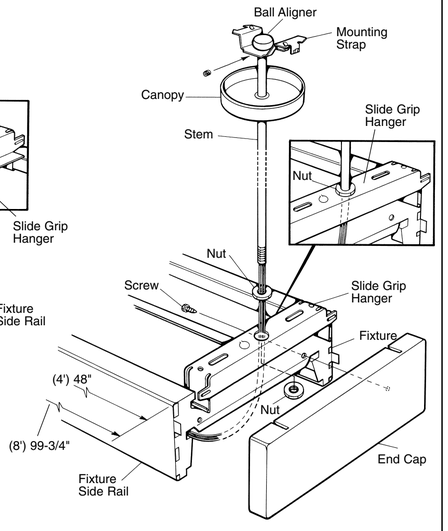

Slide Grip Hanger for Beginning or End of Row

Cable Set for Continuous Row or End of Row with Reflector or without Reflector

4 Secure cable set with threaded end of Mounting Strap through Canopy into Top Cable Bushing. Assemble Bottom Cable Bushing to Slide Grip Hanger with Nut as shown. Assemble Strain Relief in K.O. in Slide Grip Hanger and seat properly. Use Screws to assemble End Cap to Fixture. Bend tabs out to secure Slide Grip Hanger to Fixture when not installed at end of Fixture.

Catalog No. **WC60** – Canopy, Cable
WCC60 – Canopy, Cable, Straight Cord
WCCC60 – Canopy, Cable, Coiled Cord

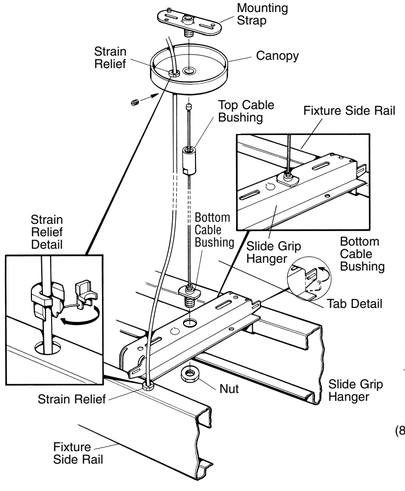

Slide Grip Hanger Along Length of Fixture

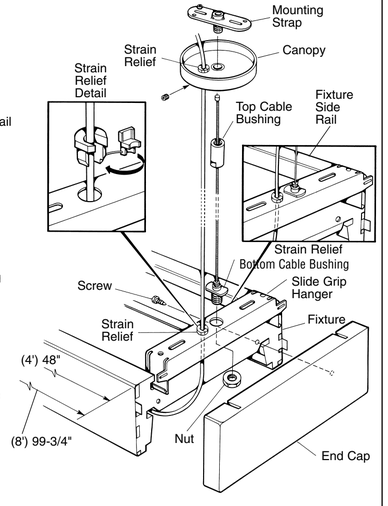

Slide Grip Hanger for Beginning or End of Row

5 Slide Grip Hanger Mounting Locations

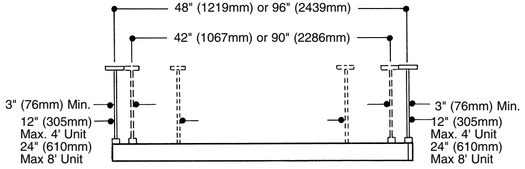

Through Wiring/Continuous Rows

6 Join Fixtures with Screws (2) Provided. Hook wires into Slot in End Plate. Make Plug-in wiring connections in Wireway. Replace Wireway Cover.